


# USE

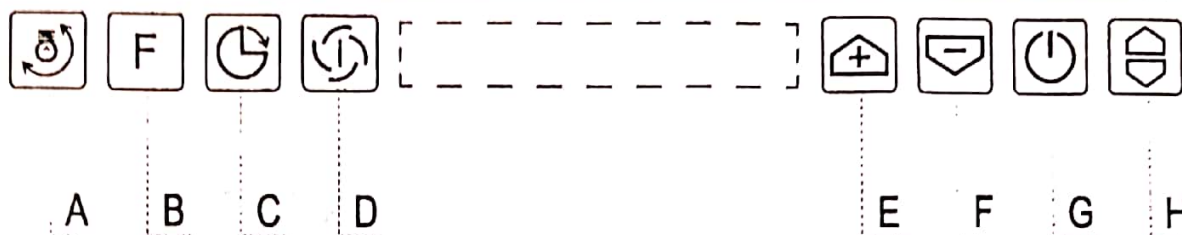

## Control panel

Button	Function	LED button
A	The button only works when the door is open.	
	Press Briefly = Turns the <b>Lights</b> On/Off at maximum intensity.	
	Press and hold for 2 Seconds = Turns the <b>Courtesy lights</b> On/Off.	
B	Door Open or Closed Press briefly = performs a <b>Reset</b> of the Filter saturation alarm.	After 100 hours in operation the <b>Drop</b> symbol is displayed to indicate saturation of the Metal Grease Filters. After 200 hours in operation the letter <b>C</b> is displayed to indicate saturation of the Activated Charcoal filters.
	Door Open or Closed Press and hold for 2 Seconds = Enables/Disables the <b>Activated Charcoal Filter Alarm</b> with the Motor turned off and no Filter Alarm triggered.	Symbol <b>C</b> flashes twice = A.C. Filter Alarm Activated Symbol <b>C</b> flashes once = A.C. Filter Alarm Deactivated
C	Door Open. Press briefly = Activates/Deactivates <b>Delay</b> mode, causing automatic shutdown of the Motor and the Lighting system from any speed with a 30' delay. It is disabled by pressing the same button again, turning the motor off or closing the door.	Displays the <b>Clock</b> symbol.
	Works both with Door Closed and Open with Motor + Lights = Off. Press and hold for 4 Seconds = Enables/disables the <b>Keyboard Lock</b> .	All the LED buttons flash twice. During the Lock the LED buttons light up in sequence.
D	Only works with the Door Open. Press briefly = Enables/Disables the <b>Intensive</b> speed. This speed is timed to run for 10 minutes. At the end of this time the system will return to the speed set previously. It is disabled by pressing the same button again, turning the motor off or closing the door.	Displays the <b>I</b> symbol.
E	Only works with the Door Open = increases the working speed.	The number of lighted segments increases.
F	Only works with the Door Open = decreases the working speed.	The number of lighted segments decreases.
G	Only works with the Door Open. Press briefly = <b>Turns the Motor On or Off</b>	LEDs turn off
	Door Open or Closed Press and hold for 2 Seconds with Motor and Lights Off = Enables/Disables the <b>Remote control</b> .	LED keys flash twice = Remote control Enabled LED keys flash once = Remote control Disabled
H	Door Open = <b>Closes the Door</b> + Lights and Motor Off (*) Door Closed = <b>Opens the Door</b> + Lights and Motor On. <b>Warning:</b> If the Door remains partially open for any reason, press the Button to complete the opening or closing cycle.	
	(*) While the Door is Closing it will block in an intermediate position after approximately 6 seconds. To finish Closing you must press the button again and hold it until the door is completely closed.	